


HONEYWELL KEYPAD QUICKGUIDE



Honeywell 6160

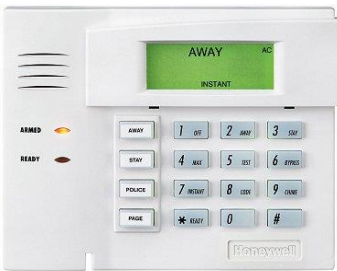

Honeywell 6150

Arm System – All protected windows and doors must be closed. Ready light should be green.

- **Away**—Press # Key + **2 (Away)** Key
Arms all devices including motion detectors.
- **Stay**—Press # Key + **3 (Stay)** Key
Arms all devices and automatically bypass all motion detectors.
- **Instant**—light should be green—Press # Key + **7 (Instant)**
Arms entry doors without delay and bypass all motion detectors.
- **Maximum**—Press # Key + **4 (Max)**
Arms all devices and will arm all entry doors without an entry delay.

Turn System Off/Silence an Alarm: Enter 4 digit code + 1 (OFF) Key

Reset System: Enter 4 Digit Code + 1 (Off Key), Twice

Door Chime On/Off: Enter 4 digit code + 9 (Chime) Key

Bypass A Zone: Enter 4 digit code + 6 (Bypass) Key + two digit zone number you wish to bypass (02, 13, 22 etc.). Wait for bypass to appear then arm the system.

Panic Buttons: Press and hold for 3 seconds



Change or Add Additional Codes:

Enter MC + 8 + User number (02,03,etc..) + new code. Default Mastercode is 1234)

1. Enter current mastercode ____ + 8 + 0 3 + New 4 digit code number
2. Enter current mastercode ____ + 8 + 0 4 + New 4 digit code number etc..

Delete A User Code:

(Default Mastercode is 1234)

Enter current mastercode ____ + 8 + user # + # 0

Sending a Test Signal:

Make sure all protected windows and doors are closed. You should have a green “ready” light on the keypad. Enter code number +(5 TEST) + 1 the system will call the monitoring center and when they receive the test signal the keypad will show “CD.” If you do not see this after one minute, call for service. To clear out the “CD” enter your code + off.